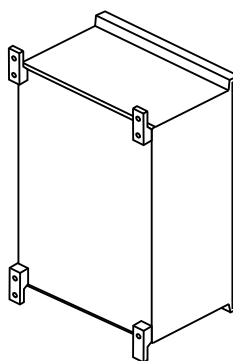
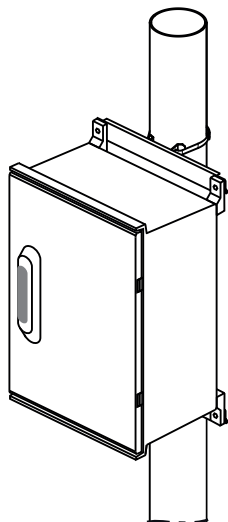
 
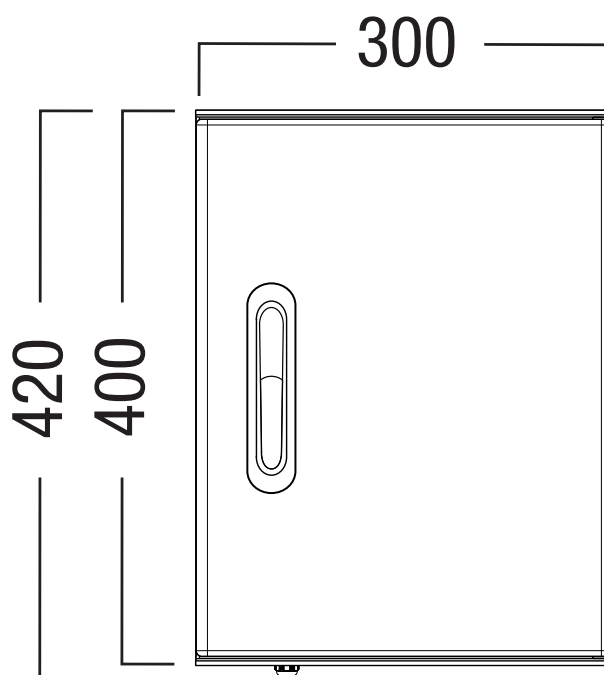
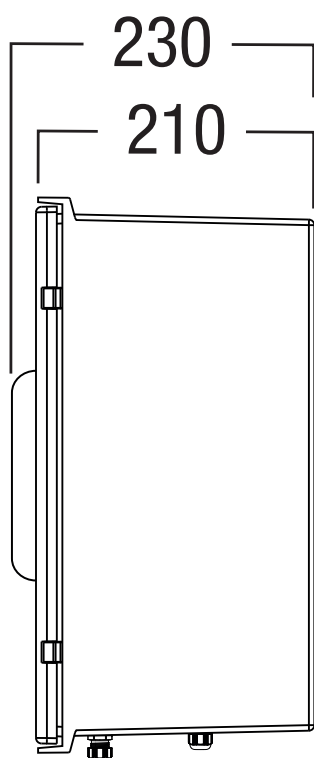



UK Installation instructions**DE** Montageanleitung**CZ** Montážní návod**DK** Monteringsvejledning**EE** Paigaldusjuhend**FI** Asennusohje**FR** Notice de montage**HU** Szerelési útmutató**IT** Istruzioni di montaggio**LT** Montavimo Instrukcijos**LV** Instalācijas instrukcija**NO** Monteringsanvisning**PL** Instrukcja montażu**SE** Installationsanvisning**RU** ИНСТРУКЦИЯ ПО МОНТАЖУ**CLASS I****IP66 / IK10**

PZ2/TX20

**230 V**




8/10/2x13/20/24

2x door
1x inside

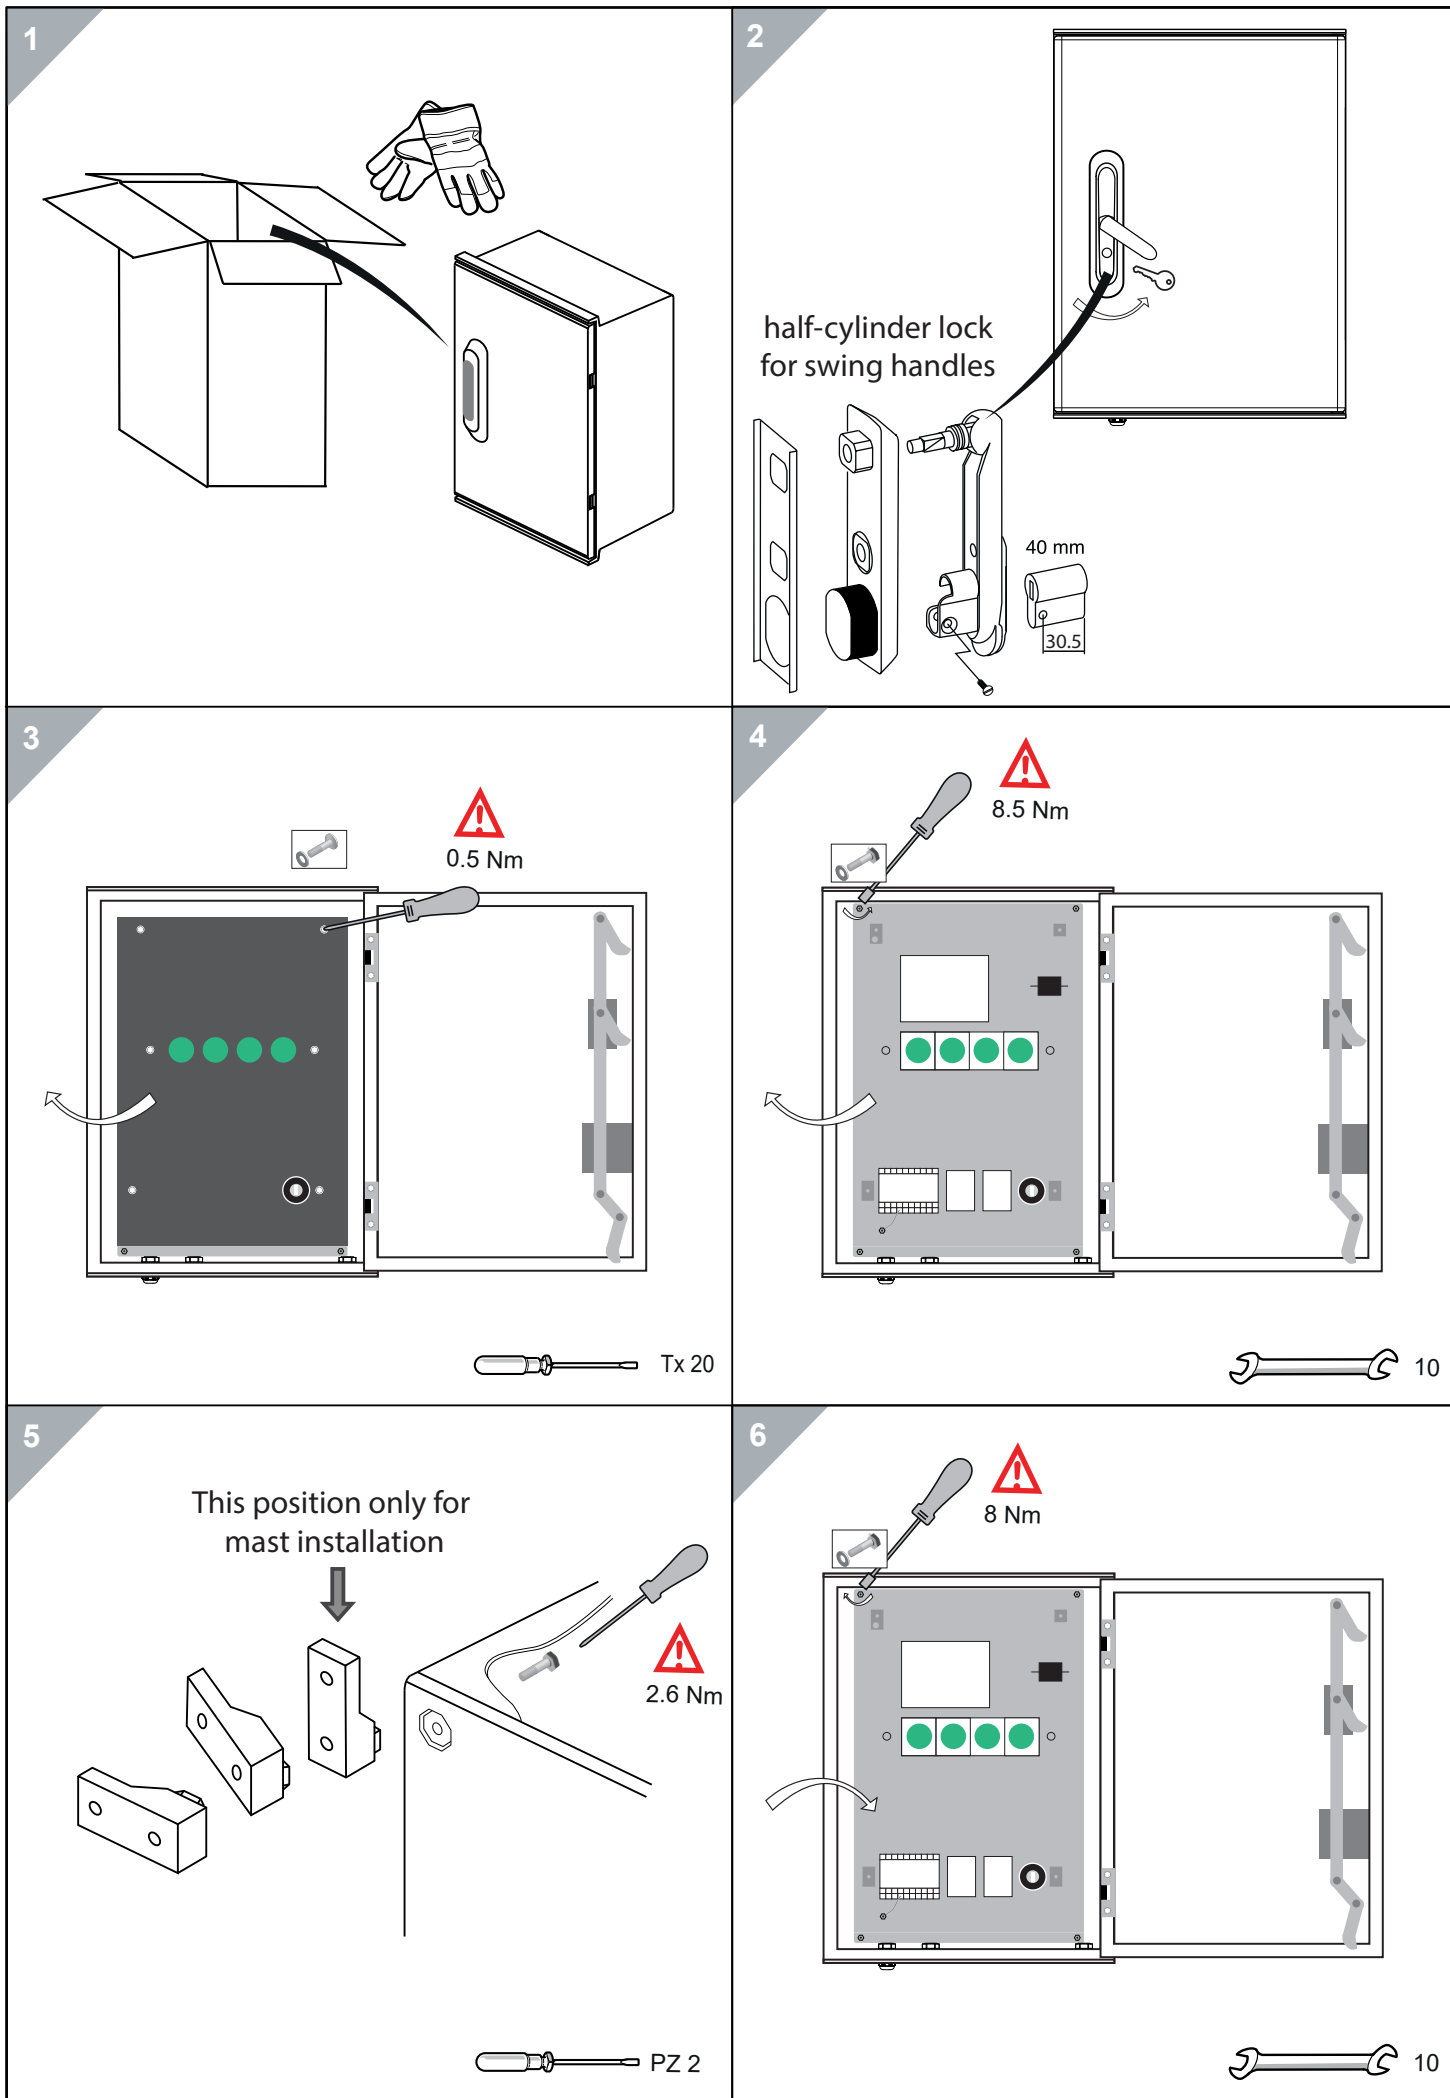




7

Mast Installation

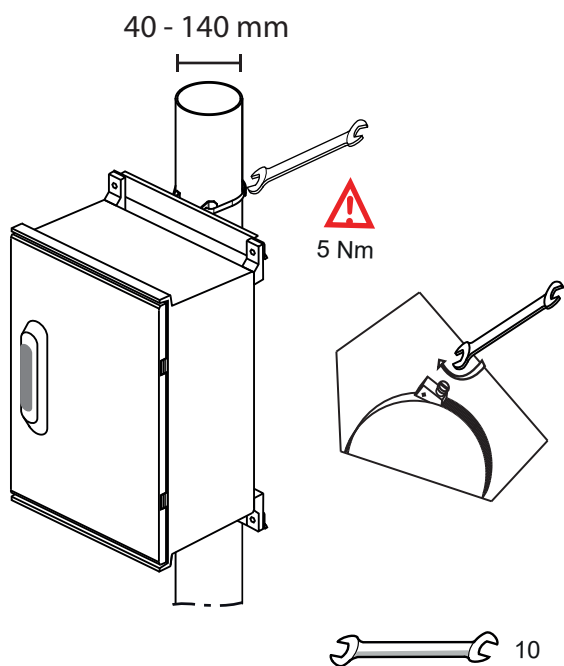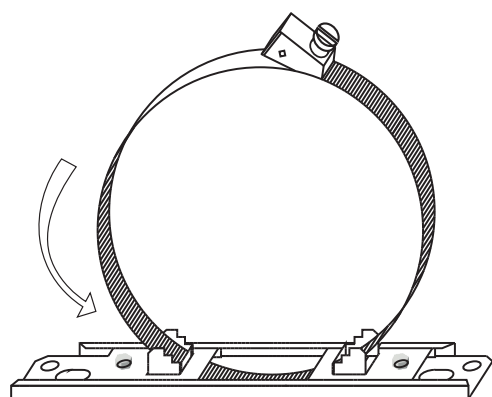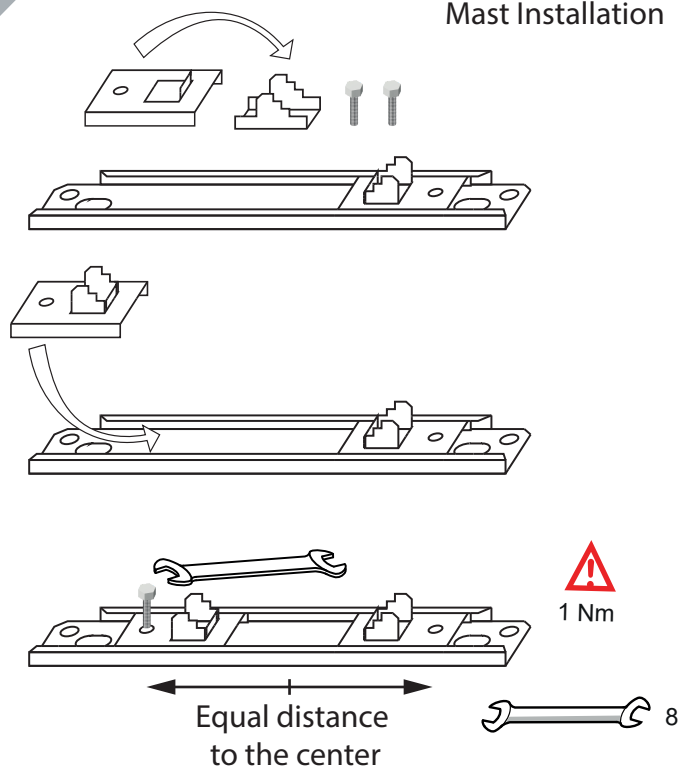


7

Wall Installation

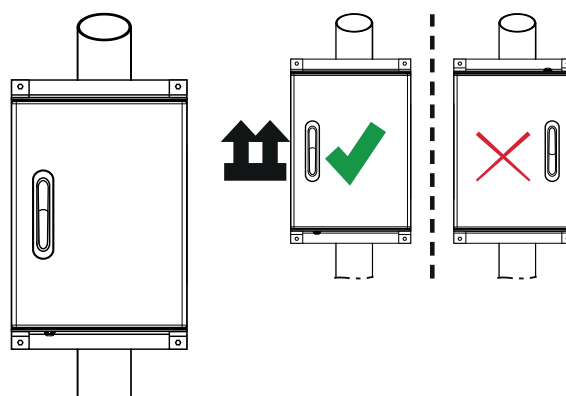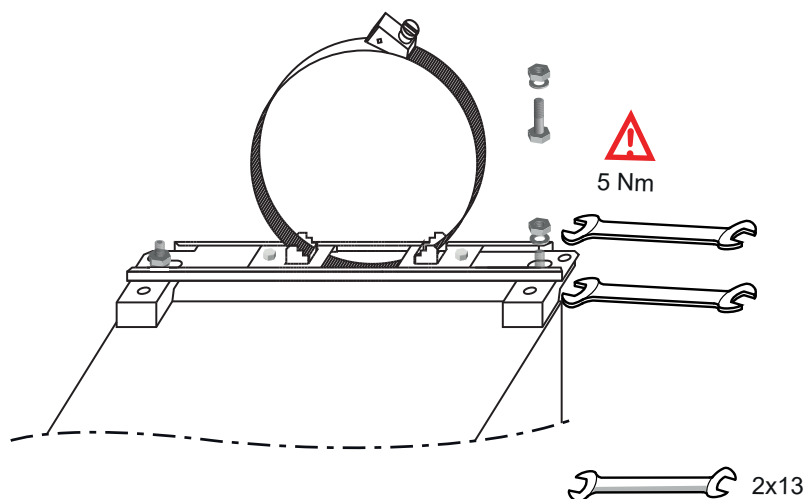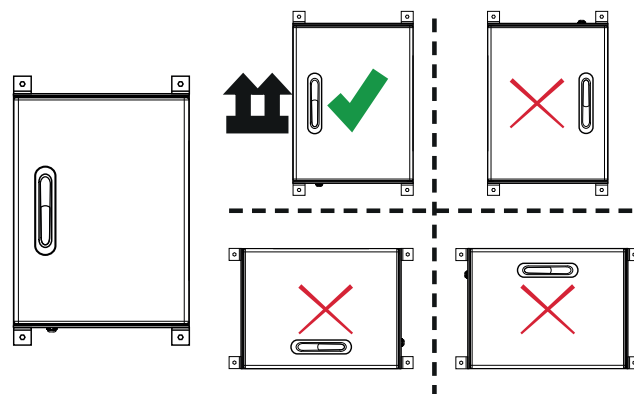


8

RF-CONTROLLER ZG bDW 96 636 993

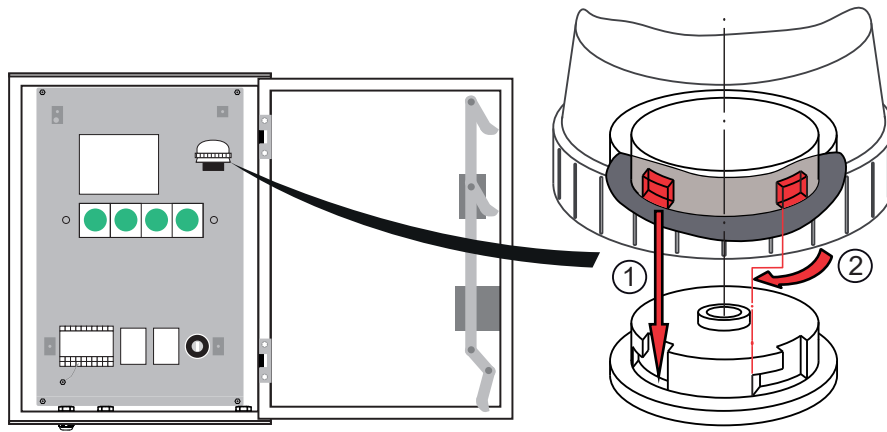


9

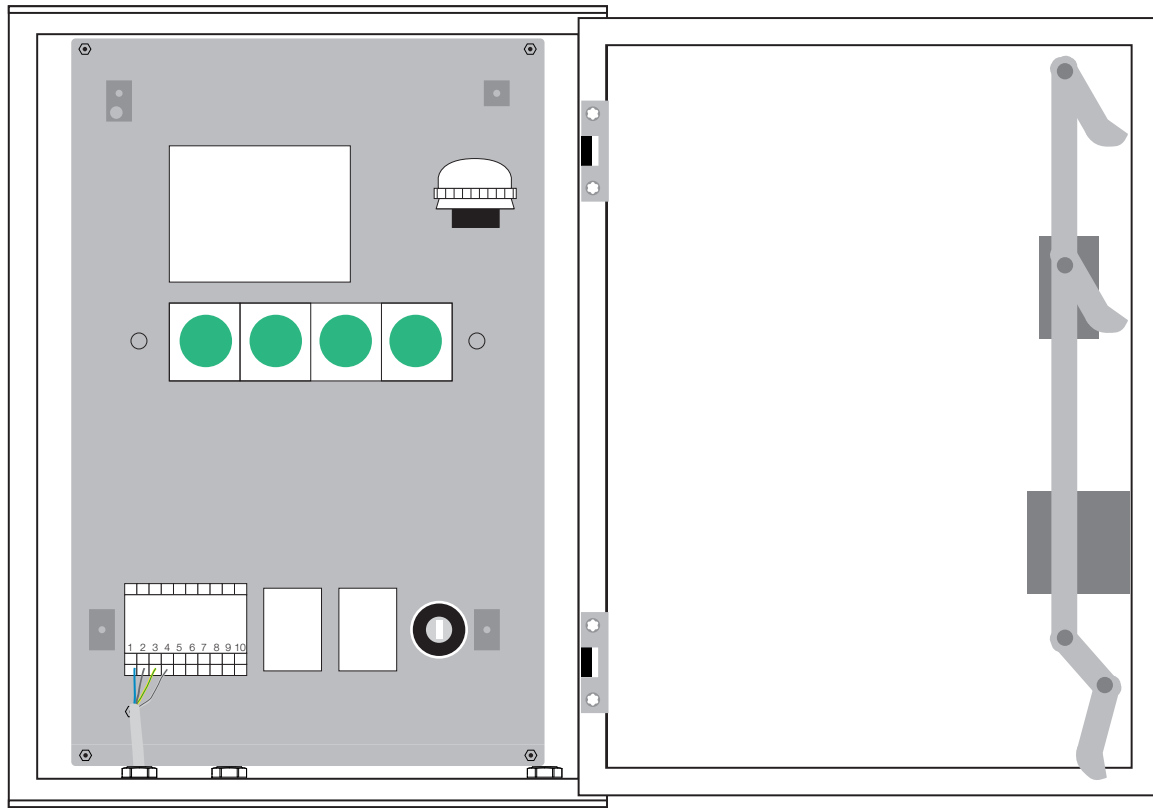


3 Nm

 MAIN




10

Optional step:
only necessary if RF CONTROLLER ZG bDW
is mounted outside the ZG 4PB SWITCHBOX

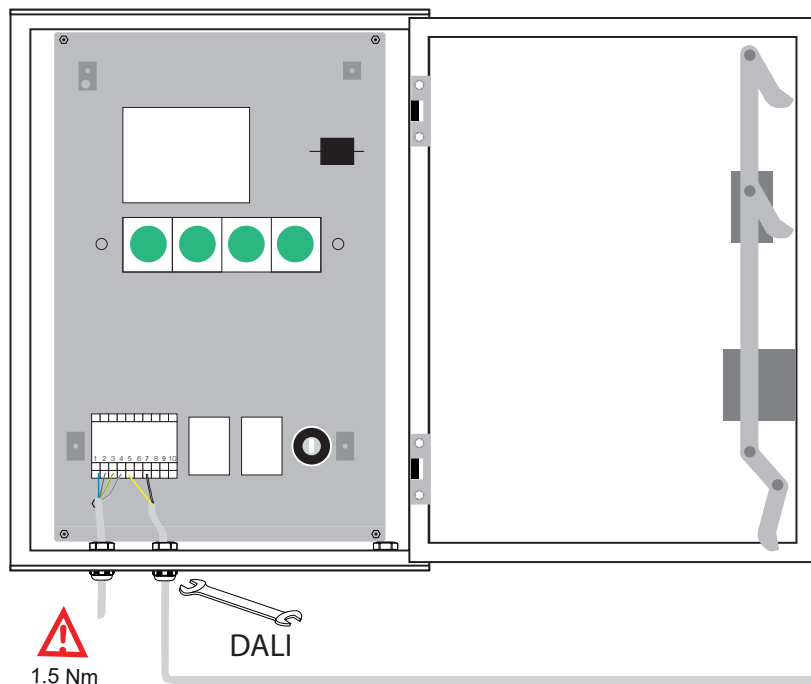

RF CONTROLLER ZG bDW 96 636 993

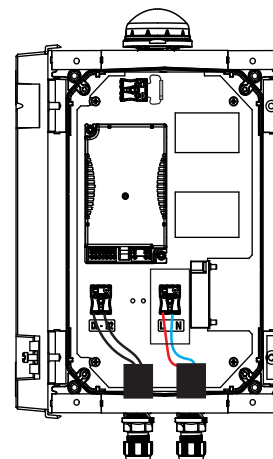

ZG RETROFIT BOX



11

